

AHPCO-4 G3 Cell Replacement Instructions

NOTE: Before you begin please unplug the unit from it's power source.

Required Tools:

1. Phillips head Screwdriver or drill with phillips head bit.
2. 5/16" socket or wrench.

1. Remove the screw on the sides of the brushed aluminum shell then remove the shell from the base of the unit.

2. Remove the two(2) 5/16" nuts from the base of the AHPCO Cell.

3. Pull AHPCO Cell up away from screw posts.

4. Disconnect lamp connector.

5. Connect the lamp connector to the new AHPCO Cell.

NOTE: Align the pins at the bottom of the lamp with the lamp connector then firmly press to make sure the lamp is connected securely.

6. Place the AHPCO Cell on screw posts.

7. Return 5/16" nuts to original location securing AHPCO Cell.

8. Replace the shell and secure with screws.

