

AHPCO-5 Cell Replacement Instructions

NOTE: Before you begin please unplug the unit from its power source.

Required Tools:

1. Phillips head Screwdriver or drill with Phillips head bit.

1. Remove the screw on the sides of the brushed aluminum shell then remove the shell from the base of the unit.

2. Pull AHPCO arms out away from the black socket head screws.

3. Pull AHPCO up and off of the machine.

4. Push the new AHPCO cell into place, ensuring the four pins are aligned with the connector. The lamp should plug into the connector as the holes in the bracket snap over the socket head screws.

NOTE: If the lamp is not fully seated on the connector after you have installed the new AHPCO cell, press down firmly on the lamp until the lamp and connector are touching.

5. Replace the shell and secure it with the screws.

