

AO3000XG3

Model: AHPCO-6G3

AHPCO-6G3-Cell
Replacement Instructions

NOTE: Before you begin please unplug the unit from its power source.

NOTE: Older models may vary slightly in appearance.

REQUIRED TOOLS:

1. Phillips head screwdriver or drill with phillips head bit.
2. 5/16" socket or wrench.

1 Remove the screw on the sides of the brushed aluminum shell then remove the shell from the base of the unit.

2 Remove the two (2) 5/16" nuts from the base of the AHPCO Cell.

3 Pull AHPCO Cell up and at an angle away from screw posts.

4 Disconnect lamp connector.

5 Connect the lamp connector to the new AHPCO Cell.

NOTE: Align the pins at the bottom of the lamp with the lamp connector then firmly press to make sure the lamp is connected securely.

6 Place the AHPCO Cell on screw posts.

7 Return 5/16" nuts to original location securing AHPCO Cell.

8 Plug in the AHPCO® Cell, slide the reset switch. Your unit will beep in 2 years when it is time to replace the AHPCO® Cell. Older models might have a reset button instead of a slide switch.

9 Replace the shell and secure with screws.

