
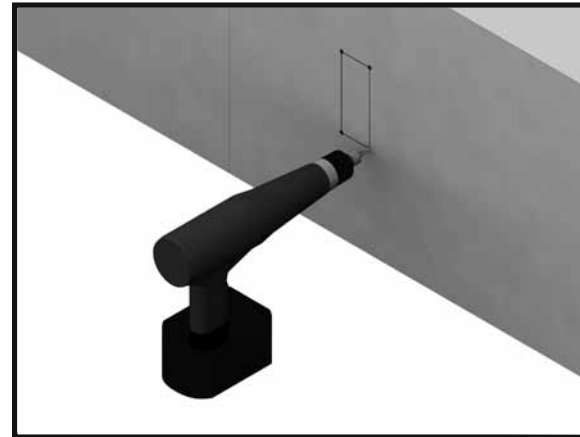


Induct 14D Installation Instructions

Step 1

Tear out the cutout template and trace the rectangle onto the ductwork.

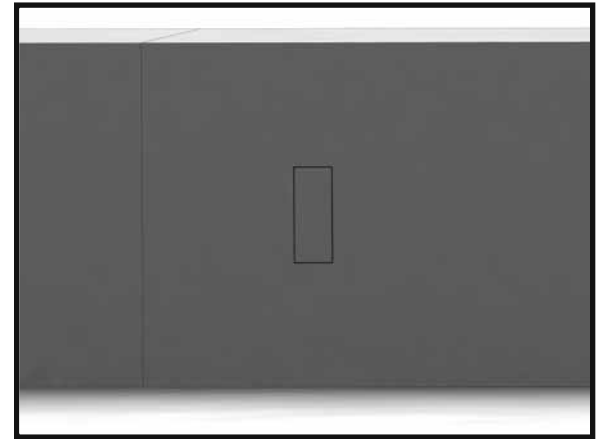


Step 2



Drill holes at each corner of the rectangle.

Step 3

Cut the rectangle out of the ductwork with a jig saw or a pair of metal cutting snips.

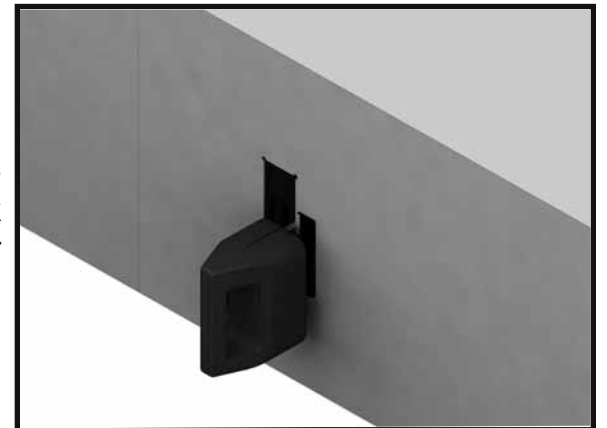


Step 4
Remove the wax paper from the gasket.

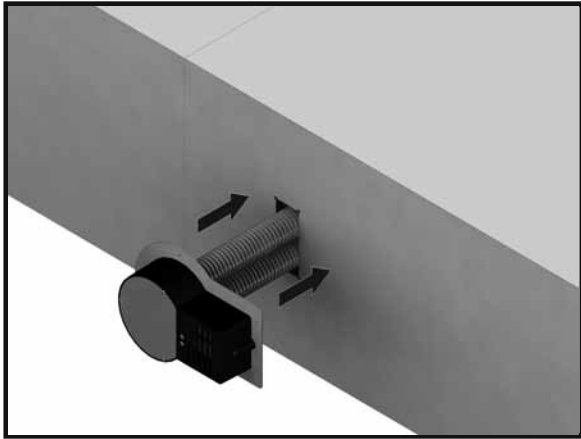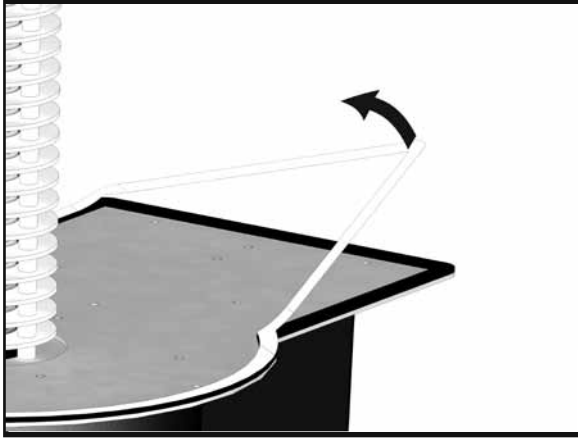

Step 5
Insert unit into pre-cut hole.

Step 6
Drill the metal tapping screws in to hold unit in place.

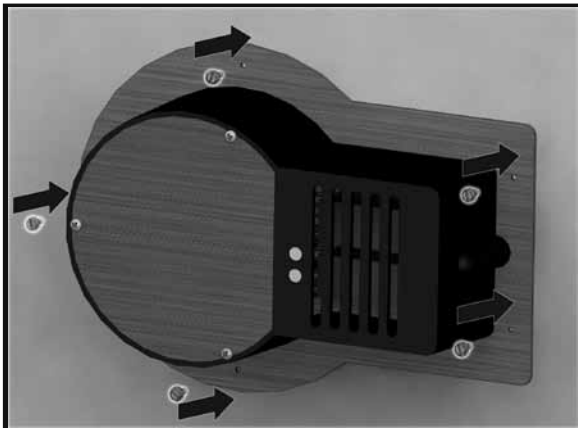

Tear this page off and cut the rectangle out. Then place on the duct work in desired position and trace the rectangle. Drill holes as indicated and then use a jig saw or metal cutting snips to cut out the rectangle.

