
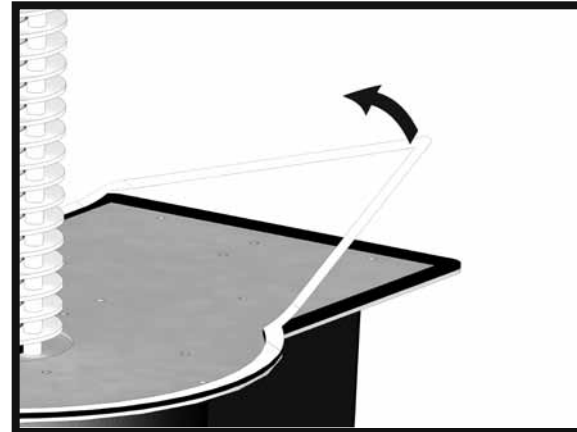


Induct 9 and 14 Installation Instructions

Step 1



Tear out the cutout template and trace the circle onto the ductwork and cut hole. We recommend using a 2.25" hole saw.

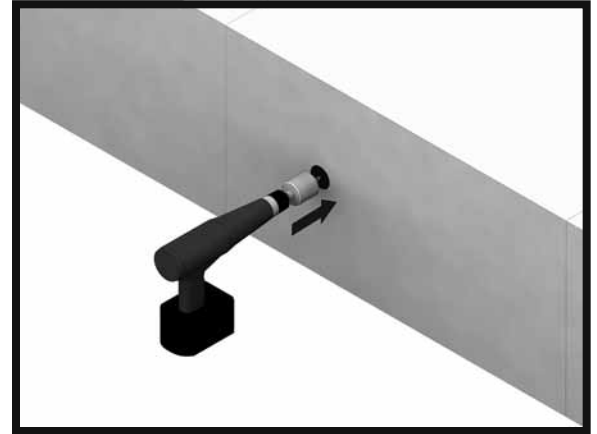

Step 2

Remove the wax paper from the gasket.

Step 3
Insert unit
into pre-cut hole.

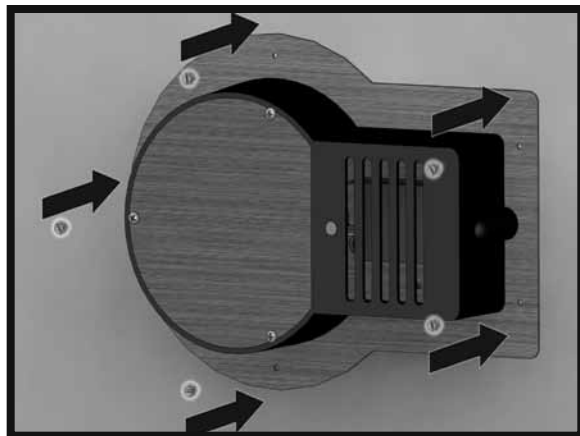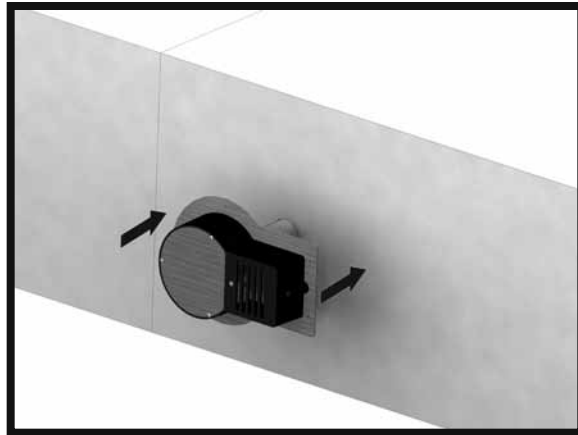

Step 4
Drill the metal
tapping screws in to
hold unit in place.

If you do not have a hole saw tear this page off and cut the circle out. Then place on the ductwork in desired position and trace the circle. Drill holes as indicated and then use a hole saw, a jig saw or metal cutting snips to cut out the circle.

